


## FOGRA Vernier Scale FNM

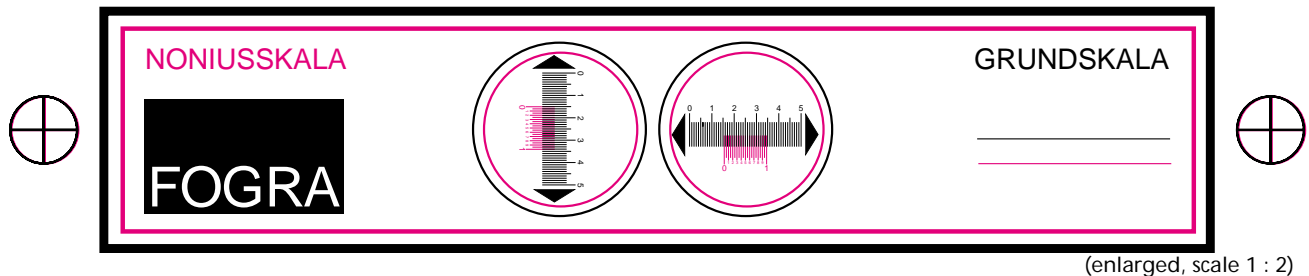

These control marks enable the register of a press to be checked to within a few micrometers. Such checks may, for example, be carried out during the acceptance trials for a press.

The FNM is supplied in the form of two small films with different scales. One of these films is mounted on the copy for one press unit and the other on the copy for the next unit.

After printing, register differences as small as 5  $\mu\text{m}$  can be read off and the measurements are entered into the FOGRA assessment form supplied with the strips. The assessment provides a statistical value in  $\mu\text{m}$  that is an unambiguous measure of deviations in circumferential and sidelay register. The smaller this value (which is the register standard deviation), the better the register accuracy of the press.

The control scales are supplied with detailed instructions, including the assessment form.

### Ordering information

**FOGRA Vernier Scale FNM, positive**

Art. No. 500p

**FOGRA Vernier Scale FNM, negative**

Art. No. 500n

Supplied in packs of 5 main scales and 5 vernier scales

**Price:** on request

(FOGRA members get a discount of 25 %)

*For further information or order please contact:*

### FOGRA

Graphic Technology Research Association

Streitfeldstr. 19, 81673 München, Germany

Telephone: +49 89/43 18 21 60

Telefax: +49 89/43 18 21 00

E-Mail: [glatz@fogra.org](mailto:glatz@fogra.org)

Internet: [www.fogra.org](http://www.fogra.org)